












- |   |   |  |   |
|---|---|--|---|
| <p>1 To switch the transceiver on, press <b>On/Off</b>.<br/>If no PIN needs to be entered the display will show the last channel used.</p>  |  | <p>4 Select operating mode (USB-LSB) if using 27MHz CB.</p>  |  |
| <p>2 If a PIN is required enter number using microphone key-pad and press <b>Enter/R'call</b>. If correct the display will show the last channel used.</p>  |  | <p>5 Tune the antenna system. Press <b>Tune</b> for automatic tuners and antennas.</p>   |  |
| <p>3 To select a channel by 'review' rotate <b>Select</b> control to scroll through the programmed channels.</p>  |  | <p>6 Switch off selected mute by pressing <b>Mute/9</b> so that any channel traffic can be heard.</p>  |  |
| <p>Or To select a channel by 'recalling' a channel number or frequency press <b>Enter/R'call</b> then use the microphone key-pad to enter the details. Press <b>Enter/R'call</b> again to display the selected channel.</p> |  | <p>7 Adjust <b>Volume</b> control as required.</p>   |  |
|   |   | <p>8 When the channel is clear of voice and data traffic press <b>PTT</b> to transmit. Speak clearly with the microphone held side-on and close to your mouth.</p> |  |

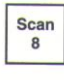




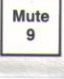



*Note: always enter the frequency to one decimal point.*

## 1 to 8 Switching on your transceiver, selecting a channel and making a voice call

### Responding to a Selcall within 30 seconds

- |   |   |
|---|---|
| <p>9 To respond to a call received when in scan mode and during the 'pause scanning' period, press <b>PTT</b>. The display will show the called channel.</p>              |  |
| <p>10 When the channel is clear of voice and data traffic again press <b>PTT</b> to transmit. Speak clearly with the microphone held side-on and close to your mouth.</p> |  |

### Responding to a Selcall held in memory

- |   |   |   |  |
|---|---|---|--|
| <p>11 Resume scanning. Press <b>Scan/8</b> to commence on the last scan table used.</p> |  | <p>12 Exit from scan mode by pressing <b>Scan</b>. Press <b>Enter/R'call</b> then <b>Call</b> to enter memory and display the last call received. To view and display calls held in memory, rotate the <b>Select</b> control.</p> | <br><br><br> |
|   |   | <p>13 Switch off selected mute by pressing <b>Mute/9</b> so that any channel traffic can be heard.</p>  |   |
|   |   | <p>14 When the channel is clear of voice and data traffic press <b>F1</b> to return the selected call.</p>  |   |
|   |   | <p>15 After receiving the call revertive wait for the station to talk to you before responding, as for 10.</p>  |   |
|   |   | <p>16 Repeat 12 to review calls held in memory.</p>   |  |
|   |   | <p>17 Resume scanning. Press <b>Scan/8</b> to commence on the last scan table used.</p>   |   |

## 9 to 17 Responding to Selcall received in scan mode and calls held in memory